

SIGNAL CHANGE LIST

UPDATED ON 16.12.2025

BD-BSL

KURAM-MANA (KUM-MANA)

STATION/ SIGNAL	LOCATION	SIDE
KURAM (KUM)	646.17	
Home (S-20)	647/17	Left
Starter S-19 (SEMI)	646/15	Left
Advance Starter S-15 (SEMI)	645/29	Left
Automatic Signal S-64426	644/27	Left
Automatic Signal S-64326	643/31	Left
DJ OPEN BOARD	643/03	N/S
Automatic Signal S-64426	642/27	Left
Automatic Signal S-64124	641/25	Left
Automatic Signal S-64024	640/21	Left
Automatic Signal S-63912	639/13	Left
MANDURA	639.09	
Automatic Signal S-63810	638/11	Left
Automatic Signal S-63706	637/09	Left
Automatic Signal S-63604	636/05	Left
Automatic Signal S-63504	635/05	Left
MANA	633.09	
PSR 634/31-632/27	•110•	
Home (S-38)	634/05	Left
MURTIZAPUR (MZR)	621.01	
Distant	624/03	Left
Inner Distant	623/05	Left
Home (S-38)	622/05	Left
Starter S-36	620/25	Left
Intermediate Starter S-26	620/11	Left
Advance Starter S-22	620/01	Left

BSL-BD

MANA-KURAM (MANA-KUM)

MANA	633.08	
Starter S-4 (SEMI)	633/22	Left
PSR 633/26-634/32	•110•	
Advance Starter S-16 (SEMI)	634/04	Left
Automatic Signal S-63505	635/06	Left
Automatic Signal S-63613	636/16	Left
Automatic Signal S-63715	637/18	Left
Automatic Signal S-63817	638/18	Left

MANDURA (D CLASS)	639.08	
Automatic Signal S-63921	639/20	Left
Automatic Signal S-64025	640/22	Left
Automatic Signal S-64129	641/26	Left
Automatic Signal S-64229	642/26	Left
DJ OPEN BOARD	643/20	N/S
Automatic Signal S-64329	643/28	Left
Automatic Signal S-64429	644/26	Left
KURAM (KUM)	646.18	
Home (S-2) (SEMI)	645/26	Left
PSR 646/06-646/34		

NGP-WR		
GUMGAON-BORKHEDI (GMG-BOK)		
STATION/ SIGNAL	LOCATION	SIDE
GUMGAON (GMG)	818.15	Right
Home (S-2) (SEMI)	819/01	Left
Starter S-8 (SEMI)	817/27	Left
Advance Starter S-9 (SEMI)	817/13	Left
Automatic Signal S-81604	816/05	Left
Automatic Signal S-81430	815/01	Left
Automatic Signal S-81328	813/29	Left
Automatic Signal S-81220	812/21	Left
Automatic Signal S-81114	811/15	Left
BUTIBORI (BTBR)	809.35	Right
Home (S Co-29) (SEMI)	810/19	Left
Starter S-22 (SEMI)	809/07	Left
Advance Starter S-21 (SEMI)	808/17	Left
PSR 807/17-807/11		
Automatic Signal S-80710	807/11	Left
Automatic Signal S-80610	806/11	Left
Automatic Signal S-80506	805/07	Left
Automatic Signal S-80406	804/07	Left
Automatic Signal S-80308	803/08	Right
WR-NGP		
BORKHEDI-GUMGAON (BOK-GMG)		
STATION/ SIGNAL	LOCATION	SIDE
BORKHEDI (BOK)	801.43	Left
Advance Starter S-8 (SEMI)	802/02	Left
Automatic Signal S-80305	803/04	Left
Automatic Signal S-80407	804/06	Left

Automatic Signal S-80507	805/06	Left
Automatic Signal S-80611	806/10	Left
Automatic Signal S-80711	807/10	Left
BUTIBORI (BTBR)	809.35	Left
Home (S-2) (SEMI)	808/14-N	Left
Starter S-3 (SEMI)	809/28	Left
Advance Starter S-10 (SEMI)	810/18	Left
Automatic Signal S-81115	811/14	Left
Automatic Signal S-81221	812/20	Left
Automatic Signal S-81327	813/26	Left
Automatic Signal S-81501	814/30	Left
Automatic Signal S-81605	816/04	Left
GUMGAON (GMG)	818.15	Left
Home (S-12) (SEMI)	817/12	Left
Starter S-18 (SEMI)	818/20	Left

SEGM-BPQ		
SEWAGRAM (SEGM)	809.35	Left
Advance Starter S-34	760-K/28	Left

WARORA-MAJRI (WRR-MJRI)		
PSR 833/32-833/16	●125●	REMOVED

TADALI-CHHOTI PADOLI (TAE-CPW)		
STATION/ SIGNAL	LOCATION	SIDE
TADALI (TAE)	861B/32	Left
GL-4 Starter S-12	TAE/1091-N	Left
Intermediate Starter S-16	862B/38	Left

CHHOTIPADOLI-VIVEKANAND NAGAR (CPW-VVKN)		
PSR 871/30-871/08	●120●	REMOVED

BABUPETH-GONDWANA VISAPUR (BPH-VSP)		
PSR 883/3-884/2	●115●	REMOVED

BPQ-SEGM		
CHHOTI PADOLI-TADALI (CPW-TAE)		
TADALI (TAE)	861B/33	Right
GL-3 Starter S-55	TAE/1023	Left
GL-2 Starter S-56	TAE/1023	Left
GL-1 Starter S-57	TAE/1017	Left